

USB TO Serial Adapter Vista System


Easy User's Guide

For Windows Vista

A. Installation for Vista PC system


Windows Vista only need install “PL-2303 Vista Driver Installer.exe”

<Step 1> Double click “PL-2303 Vista Driver Installer.exe” (Refer A1)

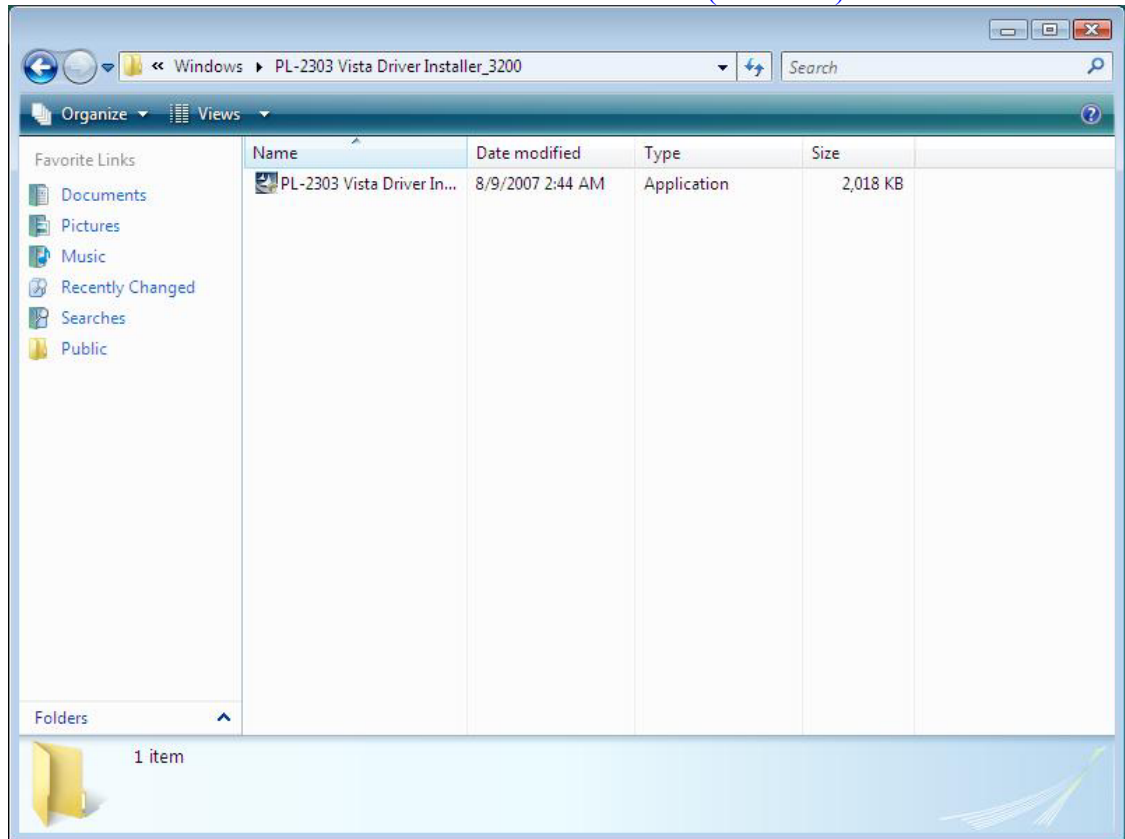

<A1>

<Step 2> Click “Next” (Refer A2)

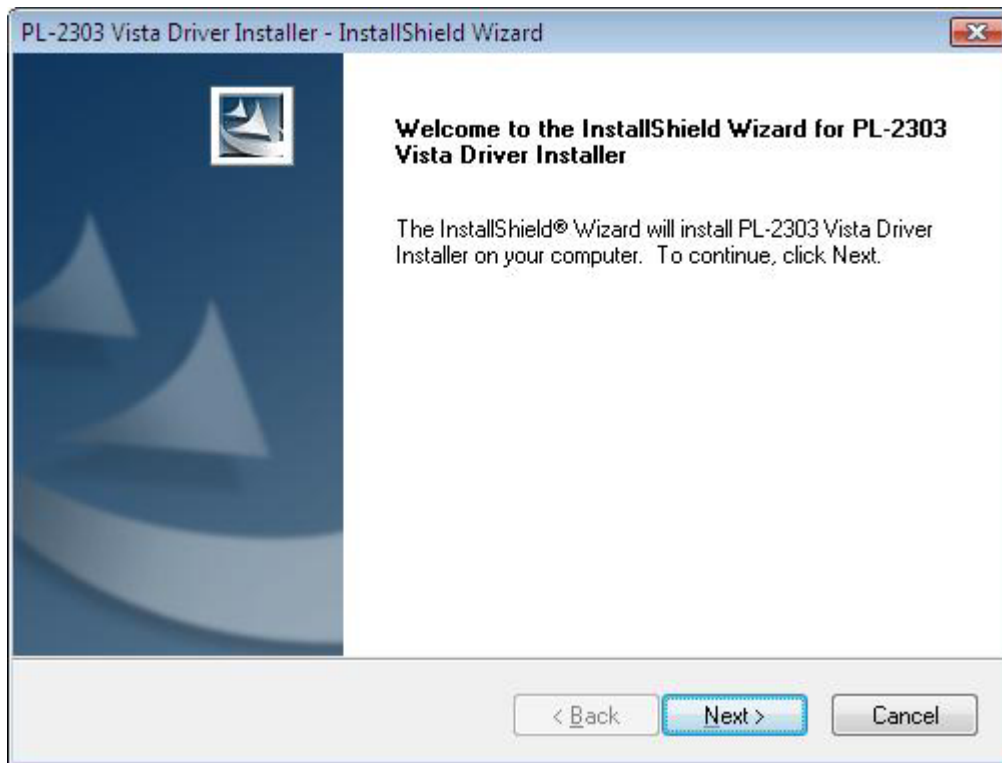


<A2>

<Step 3> Accept the terms of the license agreement and click “Next” (Refer A3)




<A3>

<Step 4> Click “Finish” to complete setup program (Refer A4)

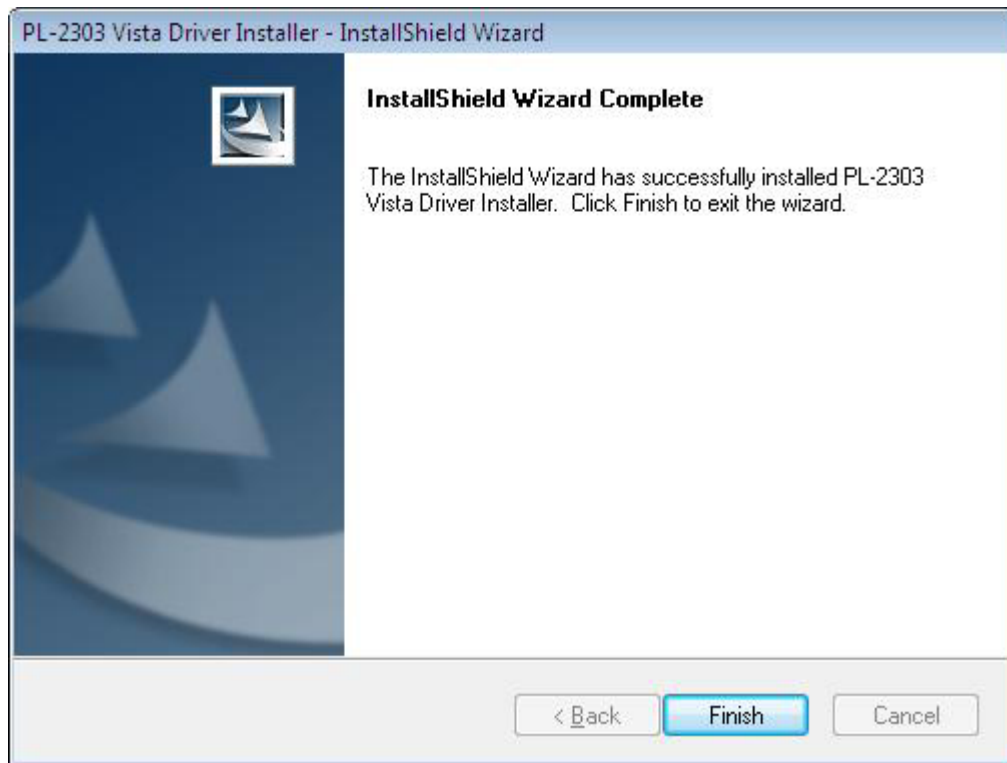

<A4>

<Step 5>Complete the installation connecting the devices, there will be a pop-up message, please follow the indications. (Refer A5)

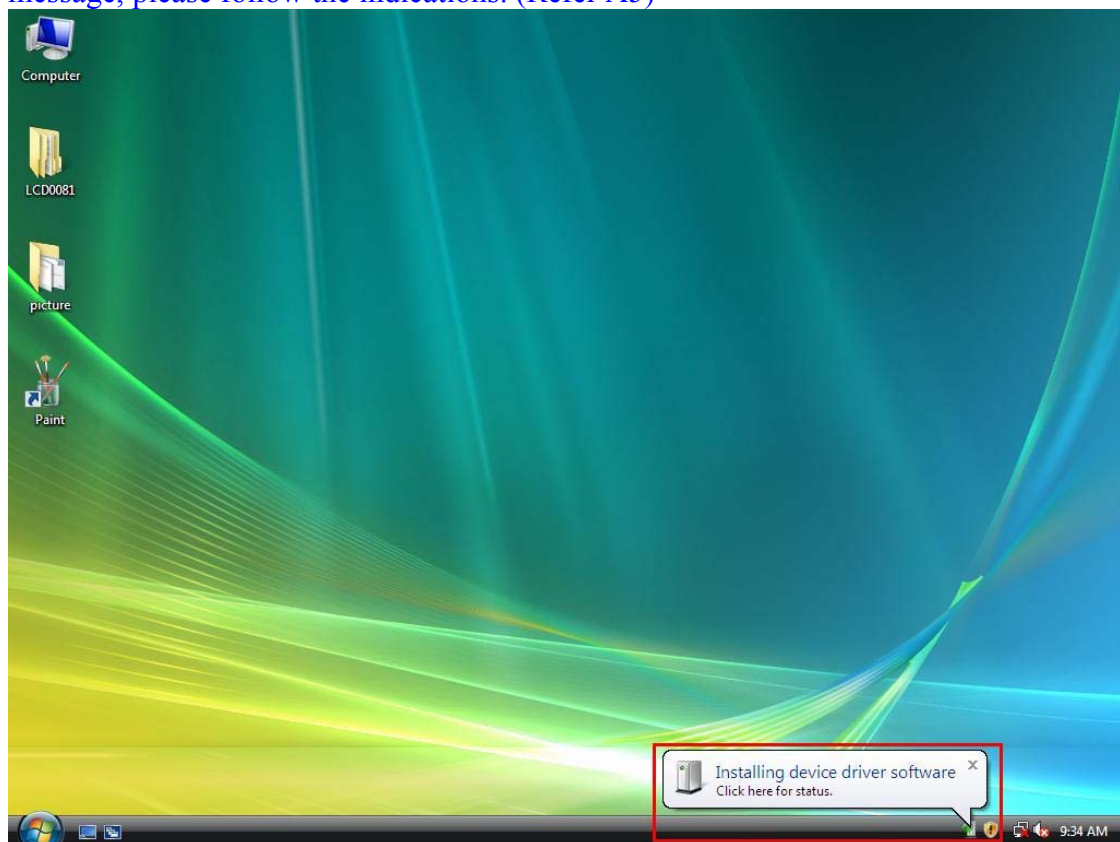

<A5>

<Step 6>The end.