

Mountable 12-Port USB 3.0 Powered Industrial Hub PC-MAC

1. Introduction: USBG-12u3ml


This Super-Speed 12-port USB 3.0 hub provides an ideal solution to expand 12 USB 3.0 ports from one single USB 3.0 host port. It provides a wide range self power source ($+7^24V$ from a 3-pin Terminal Block) to supply enough power on USB 3.0 buses.

FEATURES:

- Compliant with USB Specification Revision 3.0
- Rigid and Wall-mountable Metal Case
- Provides 12 Downstream USB 3.0 Facing Ports
- Supports 5Gbps (Super-Speed), 480Mbps (High-Speed), 12Mbps (Full-Speed), and 1.5Mbps (Low-Speed) speed
- Supports self power mode with 3-pin terminal block connection
- Multi Transaction Translators (TT) per Hub
- Supports DIN RAIL Mounting Kit



2. Connector Layout

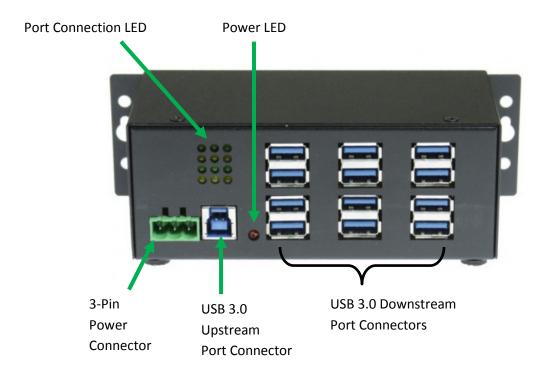

- **USB 3.0 Upstream Port Connector:** Type-B connector from upstream USB 3.0 port. It is connected from host or another USB 3.0 hub. Supports normal type USB cables.
- **USB 3.0 Downstream Port Connectors:** There are 12 Type-A downstream connectors for USB 3.0, USB 2.0 or USB 1.1 devices. They support normal type USB cables.
- **Self Power Input Connector:** This 3-pin terminal block connector is used to connect strong power to self-power the hub; the voltage can be in the range from +7V to 24V.





3. Hardware Installation

- 1. **Use static electricity discharge precautions.** Remove possible static discharge potential from any objects that the hub may come in contact with before installation. This can be accomplished by touching a bare metal chassis rail after you have turned off the power.
- 2. **Apply DC power (range from +7V to 24V) to the 3-pin Terminal Block Connector.** The hub is self-powered by this connector.
- 3. **Connecting USB Host cables:** The host cable is a standard A-to-B USB 3.0 cable. Please connect the type-A end connector of the cable to your PC's host USB 3.0 port, then insert the type-B end connector to this hub. Since the USB hub is plug-and-play, you don't have to turn off your host computer when installing the hub.
- 4. Connect the USB devices to the downstream ports of this hub.
- 5. Mount your hub on the wall or DIN RAIL if required.

4. Checking the Hub Installation

To check the USB hub installation in Windows device manager, please follow the following steps:

- 1. Click Start
- 2. Click Control Panel
- 3. Click System
- 4. Click **Device Manager** button
- 5. Double click **Universal Serial Bus Controller**
- 6. Double click **Generic USB Hub**, the message will show that this device is working properly.



5. Environmental Specifications

Operating Temperature: Storage Temperature: Operating Humidity: Dimensions (LxWxH): 0 to 55°C (32 to 131°F) -20°C to 85°C (-4 to 185°F) 5 to 95% RH 6.156"(L) x 2.59" (W) x 1.97" (H) (156.36mm x 65.79mm x 50.04mm)

