## NETUSB-400i

## **Firmware Update**

To update the current firmware of your NETUSB-400i, launch the USB Server program. Click on "Options", then "Server Configurations". Click "Update Firmware". Navigate to the UpdateImage\_E2868\_E3868\_USBServer\_2\_077\_000 bin file. Click "Open". It is normal if the progress pauses about halfway through. Once the firmware has been updated you will get a message stating "Firmware successfully updated". Click "Ok". To verify, click on the "Open Web Page" button. Ensure that the firmware version reads: V. 2.077.000

🙆 USE	3 Serv	/er		_	×
File (F)	Opt	tions (O) View (V) Help (H)			
Device		Language (L) > Information			
	~	Run this application when PC starts up. (A)			
		Server Configurations (S)			
		Open network stroage (N) 2 : USB Flash Disk			
		Open Web Page (O)			
		Connect Device (E)			
		Disconnect Device (D)			
		Request Disconnect Device (R)			
		Device Properties (B)			
		Disconnect Storage Device when Idle (T)			
		Disconnect Printer when Idle (P)			
·					
		Search Dpen Web Pag	e		

USB Server	Server Configurations	×		_		$\times$
File (F) Options (O) View (V)	Network Setting : Server Name : USB over IP Server					
- USB over IP Serv	Use DHCP					
Storage	IP Address : 192 . 168 . 10 . 120		-			
	Subnet: 255.255.255.0					
	Connect automatically by port					
	Port 1 Port 2 Port 3 Port 4					
	Set Cancel					
	Backup Firmware					
	Update Firmware					
	Change Password					
8	Restart Server		ge			

USB Serve	r	Server Cor	nfigurations		×	_	$\times$
File (F) Optio	ons (O) View (V)	Network	Setting:				
Device	🕒 Open					×	
	Look in:	📙 Updatelmage	e_E2868_E3868_USBServe	er_2_ 🗸 🌀 🤌	► 🖽 🏷		
	Quick access Desktop Libraries	Name	^ ge_E2868_E3868_USBServi	er_2_077_000.bin	Type BIN File		
	Network	< File name: Files of type:	UpdateImage_E2868_E3 Bin File (*.bin) Open as read-only Restart Serve	8868_USBServer_2_0	y ge	> Open Cancel	



## Status

Status
Network
Restart Device
Password Change

Server Information				
Server Name	USB over IP Server			
Manufacturer	Generic			
Model	Network USB Server			
Firmware Version	V. 2.077.000			
Server UP-Time	0 days, 0 hours, 1 minutes, 7 seconds.			
Web Page Version	003			

	Device 1 Information
Device Name	
Link Status	
Device Status	
Current User	

	Device 2 Information
Device Name	USB Flash Disk
Link Status	Online
Device Status	Ready
Current User	