

## 4-Port USB 3.0 Metal Hub with Surge Protection and DIN RAIL Mounting Kit – Installation Guide

### 1. Introduction: USBG-4U3ML


Thank you for purchasing this Super-Speed 4-port USB 3.0 hub. It provides an ideal solution to expand 4 USB 3.0 ports from one single USB 3.0 host port. It provides a wide range self power source (+12~24VDC from 2-pin Terminal Blocks) to supply enough power on USB 3.0 buses.

#### **FEATURES:**

- Compliant with USB Specification Revision 3.0
- Rigid and Wall-mountable Metal Case
- Provides 4 Downstream USB 3.0 Facing Ports
- Supports 5Gbps (Super-Speed), 480Mbps (High-Speed), 12Mbps (Full-Speed), and 1.5Mbps (Low-Speed) speed
- Supports 350-Watt Surge Protection for each Port
- Multi Transaction Translators (TT) per Hub
- Supports USB Battery Charging: CDP and DCP modes
- Supports USB Screw-Lock Cable Mechanism
- Supports DIN RAIL Mounting Kit



### **Connector Layout**

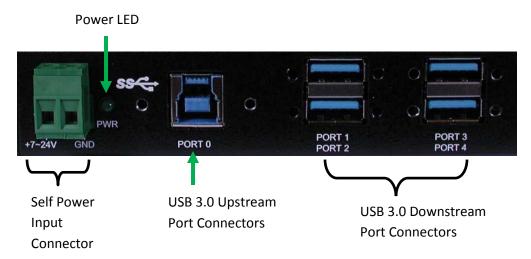

- **USB3.0 Upstream Port Connector:** Type-B connector from upstream USB3.0 port. It is connected from host or another USB3.0 hub. Supports both normal and screw-lock type USB cables.
- **USB3.0 Downstream Port Connectors:** There are 4 Type-A connectors for USB3.0, USB2.0 or USB1.1 devices. They support both normal and screw-lock type USB cables.






Self Power Input Connector: This 2-pin (one pin for positive voltage and the other pin is GND) terminal block connector is used to connect strong power to self-power the hub, the voltage can be in the range from +7V to 24VDC.

#### **WARNING!!**

Please make sure the polarity of the input power should be correctly matched with the terminal block pins to function properly.

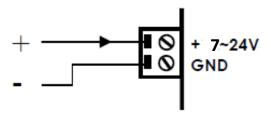

### 3. Hardware Installation

- 1. Use static electricity discharge precautions. Remove possible static discharge potential from any objects that the hub may come in contact with before installation. This can be accomplished by touching a bare metal chassis rail after you have turned off the power.
- 2. Apply DC power (range from +7V to 24V) to the 2-pin Terminal Block Connector. The hub was self-powered by this connector.
- 3. Connecting USB Host cables: The host cable could be either a standard A-to-B USB 3.0 cable or an optional A-to-B USB 3.0 screw-lock cable. Please connect the type-A end connector of the cable to your PC's host USB 3.0 port, then insert the type-B end connector to this hub. Since the USB hub is plug-and-play, you don't have to turn off your host computer when installing the hub.
- 4. Connect the USB devices to the downstream ports of this hub.
- 5. Mount your hub on the wall or DIN RAIL if required.







### 4. Checking the Hub Installation

To check the USB hub installation in Windows device manager, please follow the following steps:

- 1. Click Start
- 2. Click Control Panel
- 3. Click **System**
- 4. Click **Device Manager** button
- 5. Double click **Universal Serial Bus Controller**
- 6. Double click **Generic USB Hub**, the message will show that this device is working properly.



# 5. Environmental Specifications

Operating Temperature: Operating Humidity: Dimensions (LxWxH): 0 to 55°C (32 to 131°F) 5 to 95% RH 5.61"(L) x 2.56" (W) x 1.03" (H) (14.25 x 6.52 x 2.62 cm)

😝 USB Root Hub 🖨 USB Root Hub

